

How to Setup PureVPN on Huawei Router

If you want to set up a VPN with PPTP on your Huawei router, follow this step-by-step guide. This guide was tested on different models of routers including hg8145v5, Huawei b535, Huawei b818, Huawei b525, etc.

Things to Consider:


Before you begin, please make sure that:

- You have a working internet connection
- VPN Supported Router.
- Own a premium PureVPN account (If you do not already own one, you can buy a subscription from [here](#))

1 This image shows how your VPN setup will look like:

1a. Shows an Ethernet connection from the router to the computer.

1b. Shows a wireless connection from the router to the computer.

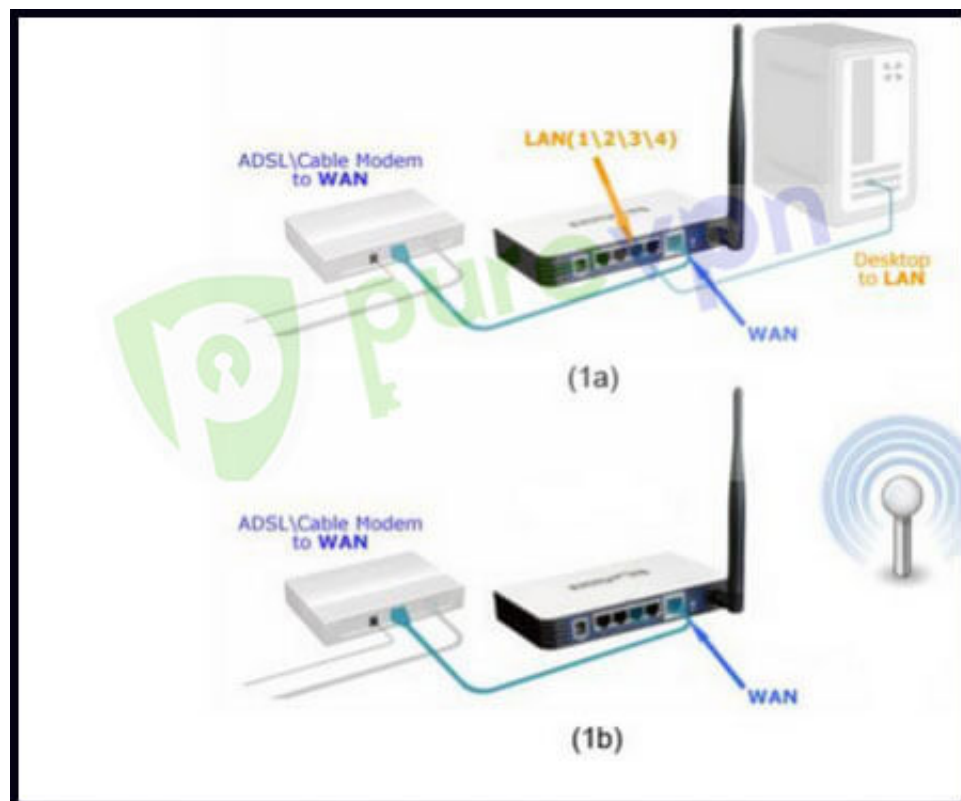

2 Browse to your router's administration panel.

3 Open VPN on the left-side menu, and expand the PPTP section

4 Enter this configuration:

- Enable PPTP LAC: Checked
- LNS address: Enter a PureVPN server address. You can find our server addresses here
- Hostname: Anything you want, for ex:- PureVPN or PureVPN PPTP, etc.
- Tunnel password: Leave empty
- Hello Interval (seconds): 60
- PPP username: PureVPN username
- PPP password: PureVPN password
- Connection mode: Auto

The screenshot shows a router's web interface. On the left is a navigation menu with 'VPN' selected. The main area is titled 'PPTP' and contains the following configuration fields:

PPTP tunnel status:	Disconnected
Enable PPTP LAC:	<input checked="" type="checkbox"/>
LNS address:	<input type="text" value="PureVPN Server Address"/>
Host name:	<input type="text" value="PureVPN"/>
Tunnel password:	<input type="text"/>
Hello interval (seconds):	<input type="text" value="60"/> [10 – 3600]
PPP username:	<input type="text" value="PureVPN Username"/>
PPP password:	<input type="text" value="PureVPN Password"/>
Connection mode:	<input type="text" value="Auto"/>

A 'Save' button is located at the bottom right of the configuration area.

5 Click Save.